

ID	SW1 1 2 3 (ID)
1	ON OFF OFF
2	OFF ON OFF
3	ON ON OFF
4	OFF OFF ON
5	ON OFF ON
6	OFF ON ON
7	ON ON ON

SW3 SW4	RAM address
1-2 1-2	CC0
2-3 1-2	CD0
1-2 2-3	CE0
2-3 2-3	CF0

DMA	SW1 7 8
0	OFF OFF
-	ON OFF
2	OFF ON
3	ON ON

(do not use)

SW2 1 2 3 4 5 6 7 8	type of PC-98
OFF ON ON OFF ON ON ON ON	others models
OFF ON ON OFF ON ON OFF ON	PC-98U, UV, VF, VM, CV 286U
OFF ON ON OFF ON OFF OFF ON	PC-98XA
OFF ON ON OFF ON OFF ON ON	PC-98XL, XL ^ 2, RL, H98
OFF ON OFF OFF ON ON OFF ON	PC-98E, F, M

irq	SW1 4 5 6 (irq)
0	OFF OFF OFF
1	ON OFF OFF
2	OFF ON OFF
3	ON ON OFF
4	OFF OFF ON
5	ON OFF ON

SW1 = card ID, IRQ & DMA

SW2 = machine type for using with this card

SW3 = RAM address setup

DIP switch & jumper settings for SCSI C-BUS PC-98 card (SCSIB55IV from Techno Japan)

Dr.Wily